



INSTRUCTION GUIDE

11" WASTE ARM

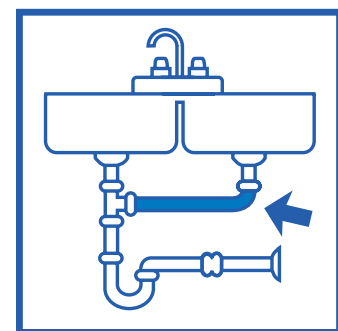

- 1** Measure and cut waste arm **(C)** to required length.
- 2** Position nut **(A)** then washer **(B)** on tailpiece **(D)**.
- 3** Attach waste arm **(C)** to tailpiece **(D)** with nut **(A)** and washer **(B)**.
- 4** Position nut **(A)** then washer **(B)** on waste arm **(C)**.
- 5** Connect opposite end of the waste arm **(C)** to drain.
- 6** Tighten all nuts **(A)**. **CHECK FOR LEAKS.**

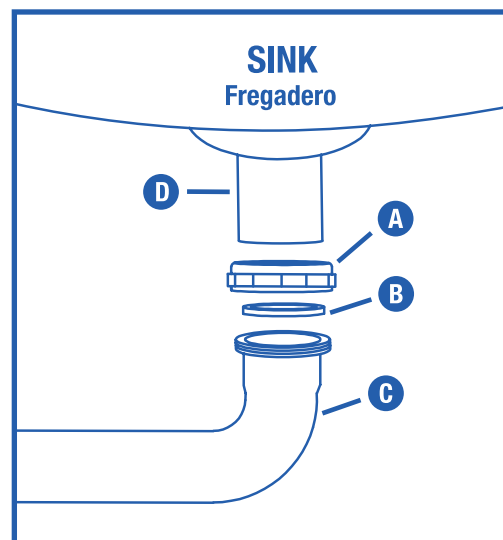

©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.