
INSTRUCTION GUIDE SLIP JOINT COUPLING

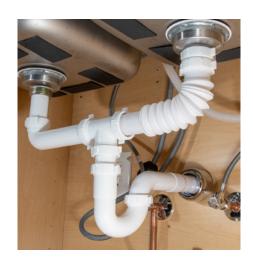

- Remove the slip joint nuts and washers from the coupling.
- Slide the slip joint nuts then washers over the existing tube ends. If using a 1-1/2 in. coupling with a 1-1/4 in. tube, use a reducing washer to make the transition.



- Tighten the nuts, being sure not to overtighten.
- Check for leaks. If leaks occur, tighten another 1/4 turn.

©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.