

# INSTRUCTION GUIDE

## P-TRAP

Oatey

**1** Cut new wall tube **(A)** to length required.

**2** Position nut **(B)** on wall tube **(A)**.



**3** If replacement of threaded adapter **(C)** is necessary, solvent weld threaded adapter **(C)** to tube extending from wall. Follow solvent cement package instructions.

**4** Attach wall tube **(A)** to threaded adapter **(C)** using nut **(D)** and washer **(E)**.

**5** Position nut **(F)** and washer **(G)** on tailpiece. (Use reducer washer **(H)** if tailpiece is 1-1/4 in.)

**6** Slip tailpiece into J-bend **(I)**.

**7** Tighten all nuts. **CHECK FOR LEAKS.**

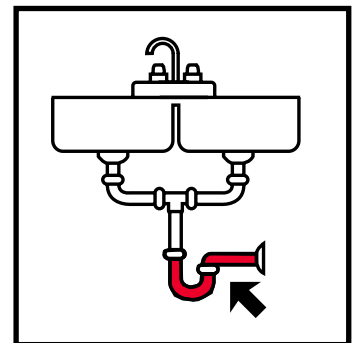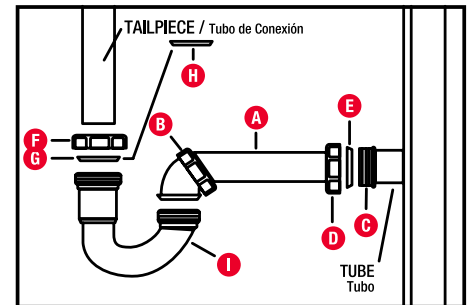

©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found [www.Oatey.com](http://www.Oatey.com).

Oatey.com