


INSTRUCTION GUIDE

PVC HEAVY DUTY P-TRAP



1

Remove nut (A) and washer (B) from SCH. 40 connector (C). Follow instructions on PVC solvent cement to attach connector (C) to outside of SCH. 40 stub out pipe (D).

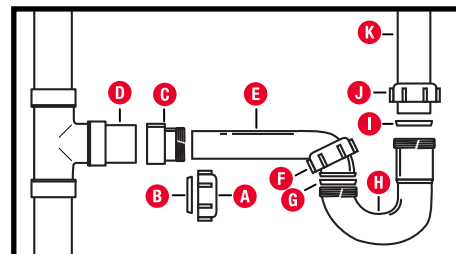

2

Measure and cut wall tube (E) to length required.

3

Position nut (F) and washer (G) on wall tube (E).

4

Place nut (A) and washer (B) onto wall tube (E) and insert into waste connector (C).

5

Position nut (J) and washer (I) on tailpiece (K). (Use reducer washer if tailpiece is 1-1/4 in.)

6

Position J-bend (H) onto tailpiece (K).

7

Tighten nuts. **CHECK FOR LEAKS.**

