

INSTRUCTION GUIDE REPAIR P-TRAP

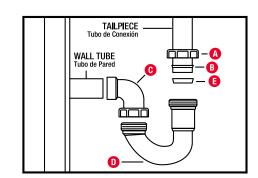

- Place nuts (A) and washers (B) onto tailpiece. If using slip joint elbow, place nuts (A) and washers (B) onto wall tube as well. Use reducer washer (E) if tailpiece is 1-1/4 in.
- For slip joint elbow, attach elbow **(C)** to J-bend **(D)** and wall tube. For solvent weld elbow, follow instructions on PVC solvent cement to connect elbow **(C)** to wall tube. Once solvent weld process is complete, attach J-bend **(D)** to tailpiece and elbow **(C)**.

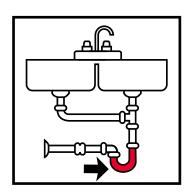

Tighten nuts. CHECK FOR LEAKS.



©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.