

INSTRUCTION GUIDE

16" END OUTLET WASTE





1 Place nut **(D)** and 1-1/2 in. washer **(E)** onto tailpiece **(B)**, attach to tee **(F)** and tighten nut **(D)**.

2 Measure and cut arm **(G)** to required length.

3 Place nut **(H)** and 1-1/2 in. washer **(I)** onto tailpiece **(B)**.

4 Place nut **(J)** and 1-1/2 in. washer **(K)** onto arm **(G)**.

5 Tighten nuts. **CHECK FOR LEAKS.**

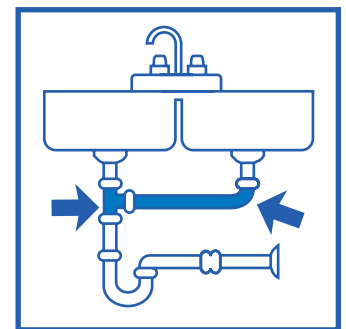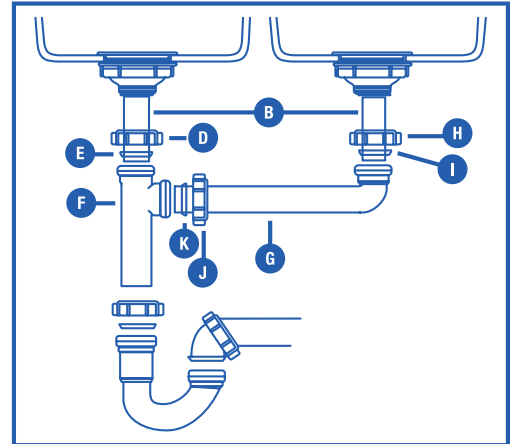

©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.